The MySensors expansion connector (MYSX) Specification revision 1.0

CHANGELOG

1.0: [2015-07-18 Fallberg/Anticimex] Initial version of specification. Specifies MYSX rev. 1.0-1.5.

ABSTRACT

The MySensors expansion connector serves as a uniform interface between official MySensors boards and MySensors (or user created) daughter boards. This document describes hard requirements on the connector (pinouts and required/expected pin capabilities) and soft requirements (placement/layout considerations).


The connector comes in several versions where each new sub-version is backwards compatible with previous versions.

That is, v1.5 will be compatible with 1.3 and 1.0. In other words, every new sub-version will expand on the existing connector capabilities, but never reduce capabilities. It is for this reason also assumed that every board that implement the MYSX connector stick to a revision where it can provide all the featgures of that particular revision.

LAYOUT/PLACEMENT CONSIDERATIONS

The MYSX connector should be placed close to the board edge with a 100 mil spacing from all

edges. The footprint has a courtyard outline to emphasize this. It should be oriented so that pin1 is always closest to the board edge parallel to the connector. This allows a daughter board designed using the same constraints to be facing back "inwards" over the motherboard. This helps keeping the overall board outline the same shape as the motherboard (where applicable). For this reason, component placement on the motherboard should take into account the presence of a daughter board when placing

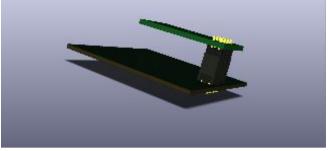


Typical motherboard and daughterboard arrangement

tall components in vicinity to the MYSX connector.

Also note that for a daughterboard, in order to align the pin numbers properly, the MYSX "component" should be placed on top layer, but be soldered on the bottom layer to create a 1-1 mapping between the boards.

Also the "far" edge of the connector (beyond the highest numbered pins) and the area beyond it should if possible be kept free of protruding components in order to accommodate a

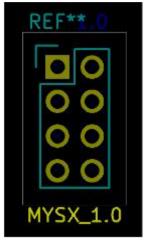

The footprint of MYSX 1.0

daughter board that also can mate with later versions of the MYSX connector.

CONNECTOR CHARACTERISTICS

The MYSX connector is a standard 100 mil pitch dual row pin header. In it's simplest form, it consists of 8 pins where pins 1-4 are the power rails. The remaining pins are documented in the corresponding revision chapters in incremental order. An optional additional feature of the pin is indicated with parenthesis. It cannot be taken for granted that every single implementation of the MYSX connector implement the optional additional pin feature, but if the feature is available on the motherboard, this would indicate where that feature is exported in the connector.

The motherboard board header file provides macros that map the MYSX_<netname> identifiers to the board-specific layout so for any function call involving a MYSX connector signal, the macro should be used. This allows the sketch to be portable across motherboards.

Pin 1: Vraw (typically unregulated voltage, either from motherboard to daughterboard or vice versa)

Motherboard should have a jumper to cut onboard Vraw source if daughterboard provides Vraw. Be sure to check motherboard constraints on Vraw before connecting a daughterboard that provides Vraw (for over voltage protection). Should be able to source at least 100mA and all boards are recommended to support a voltage up to 24V on this pin.

Pin 2: +3.3V fixed voltage (can source at least 100mA)

Pin 3: VCCio (depending on MCU core voltage). Should not be used for heavy loads.

Pin 4: GND

MYSX 1.0

Pin 5: MYSX_D1_DFM - Digital IO (USART TX (data from MCU))

Pin 6: MYSX_D2_DTM - Digital IO (USART RX (data to MCU))

Pin 7: MYSX_A1 - Analog input Pin 8: MYSX_A2 - Analog input

MYSX 1.1

Pin 9: MYSX_D3_INT - Digital IO (interrupt)
Pin 10: MYSX_D4_INT - Digital IO (interrupt)

MYSX 1.2

Pin 11: MYSX_D5_PWM - Digital IO (PWM) Pin 12: MYSX_D6_PWM - Digital IO (PWM)

MYSX 1.3

Pin 13: MYSX_D7_SCL - Digital IO (I²C SCL)
Pin 14: MYSX_D8_SDA - Digital IO (I²C SDA)

MYSX 1.4

Pin 15: MYSX_D9_A3 - Digital IO (analog input)
Pin 16: MYSX_D10_A4 - Digital IO (analog input)

MYSX 1.5

Pin 17: MYSX_D11_MOSI - Digital IO (SPI MOSI)

Pin 18: MYSX_D12_MISO - Digital IO (SPI MISO)

Pin 19: MYSX_D13_SCK - Digital IO (SPI SCK)

Pin 20: MYSX_D14_CS - Digital IO (also for SPI CS)